

## AUDIO INDUCTION LOOP

- Providing amplified sound for both hearing and hearing impaired people.
- Available for use by individuals in the home, office, interviews etc.
- Contact Manning Valley Neighbourhood Services on (02) 65535121 for enquiries regarding the Audio Induction Loop.
- The Loop is available for use free of charge at the Centre or use elsewhere upon payment of a \$50 refundable deposit.

## Hire Agreement

MVNS Inc agrees to the hiring of this hearing loop provided the following details are provided and guidelines followed:

1. Hirer Details  
ID is sighted and contact details are recorded below.  
Name:.....  
Address:.....  
.....  
Phone No:.....  
Organisation:.....
2. Payment of a \$50 refundable deposit at time of picking up loop.  
\$50 received  Signed:.....  
Receipt provided  (staff member)
3. Undertake instruction by a staff member in use of the loop before leaving the Centre.
4. Contents sighted and contents sheet signed (copy provided). (Refund dependent on *all* contents being returned in good order).
5. Agreed date of return ...../...../.....  
(If loop is not returned by this date, deposit will be forfeited.)

I agree to the above conditions.

..... (Hirer)

*\* On Return—Contents sighted by MVNS Staff member and Deposit refunded: ...../...../.....*

*Hirer signature:* .....

*MVNS signature:*.....

# Manning Valley Neighbourhood Services Inc.




## AUDIO INDUCTION LOOP HIRE SERVICE

Manning Valley Neighbourhood Services Inc.  
Old Courthouse Building, 4 Farquhar St Wingham  
Ph/Fax: (02) 6553 5121  
Email: mvns@mvns.org.au  
www.mvns.org.au  
ABN: 79 194 271 854  
(MVNS Inc. is funded by the Dept of Community Services)

# What is an Audio Induction Loop?

1. It consists of a microphone, an amplifier, and in the place of a loudspeaker, a coil of wire placed around the room. Sound waves from the speaker's voice going into the microphone are changed into an electric current, amplified, and then sent through the coil which emits a magnetic field in the room. The field is picked up by the telephone pickup coil of a hearing aid, amplified, and converted back into sound. Hearing aid users sitting within the loop system can pick up a speaker's voice or other auditory stimulus with a minimum of distortion and no background noise simply by turning on the telephone switch ("T-switch") of their aids. The loop is fully adaptable to television, radio, hi-fi, tape recorder or movie projector.
2. *Please note:* Headphones are not supplied with this unit. It is only for use by those with hearing aids. The black pad is for use in smaller rooms and can be placed in front of the person using it, or over the back of a chair (do **not** sit on it). The longer loop cables are for use in larger rooms and person can sit anywhere inside the loop. Red and white cables are for use with TV/VCR/radio etc.
3. **Important:** For the safety of those using the loop, Occupational Health and Safety issues need to be taken into consideration, especially with the placement of the cords, eg go over doorways, do not place furniture on top of cord.

## Public Address System

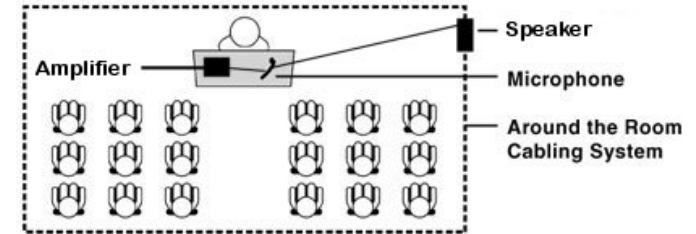

## Audio Loop in the Home

